Using the Clubhouse with Passengers

A It may be illegal to carry passengers on a bike in your area even if it has been designed or configured to do so. Check your local regulations before carrying passengers.

Children who use the Clubhouse must be between 5 - 10 years old, 110 - 140 cm (43 - 55 in) tall and weigh between 18 - 30 kg (40 - 65 lb).

Please follow and check the GSD Manual for the latest information about maximum load limit.

Footrests

Clubhouse must be used with footrests such as the Sidekick™ Foot Pegs or Sidekick™ Lower Deck. Passenger must be tall enough so that their feet can lay flat on the footrest. If a child's feet cannot comfortably reach the footrest, please use a child seat instead.

Handholds

Whenever the GSD is in motion, the passenger must hold on to the Clubhouse.

Helmet

Passengers must wear an approved helmet.

Attire


Avoid wearing loose-fitting clothing such as skirts, pants, and shoelaces which can get caught in the spinning wheel. Take care that all straps are tied down.

Protection from Tire

Clubhouse must be used with a set of flat folding Cargo Hold™ Panniers or pannier bags to act as a safeguard from the tire and spokes.

What's Included

- Clubhouse Frame
- Clubhouse Frame Bolt Set
 - M6 x 35 mm x 4
 - M6 Washer x 8
 - M6 Nut x 4
- Bar Tape x 2
- MadPad[™] Seatpad
- MadPad Plate Set
- MadPad Plate Bolt Set
- M5 x 15 mm x 4
- M5 Washer x 4
- M5 Nut x 4

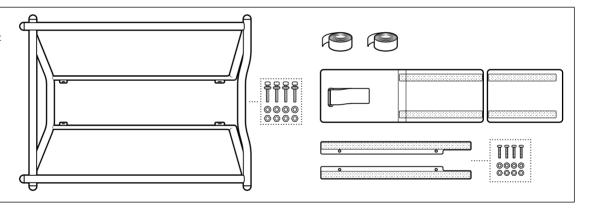




Installation


Tools required (not included)

- 3 mm Allen Wrench with Ball End and 8 mm Open-End Wrench to install MadPad Plate
- 5 mm Allen Wrench with Ball End and 10 mm Open-End Wrench to install Clubhouse Frame


How to Install the Clubhouse Frame

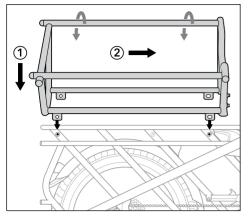

1. Insert the Clubhouse Frame at an angle to GSD rack. Rotate and slide into position.

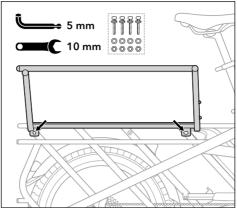


 Align Clubhouse Frame to the side GSD rack mounting holes, insert M6 x 35 mm Bolts and tighten Bolts to a torque of 9 Nm - 10 Nm.

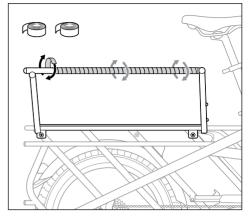


3. Wrap Bar Tape to side rails of Clubhouse Frame.


How to Install the MadPad Plate

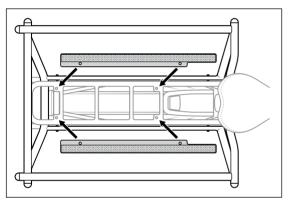

1. Align MadPad Plate to the top GSD rack mounting holes.

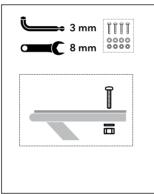

2. Insert M5 x 15 mm Bolts and partially tighten.

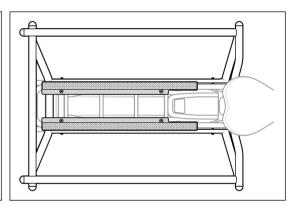


3. Tighten Bolts to a torque of 5 Nm - 6 Nm.

A If you are unsure of how to install this product, please consult a qualified bicycle technician.

Transporting Two Children


Carry up to 2 passengers ages 5 - 10 years old. Children must weigh between 18 - 30 kg (40 - 65 lb) and be 110 - 140 cm (43 to 55 in) in height.

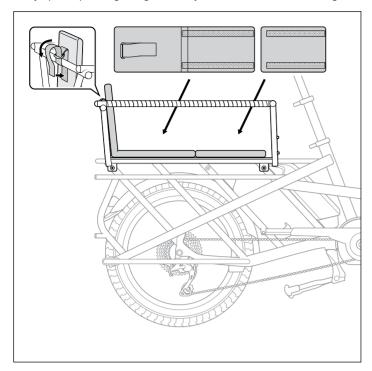



- 1. Attach MadPad Seatpad to velcro strips on MadPad Plate.
- $2. \ Attach \ backrest \ strap \ to \ Clubhouse \ Frame.$


Using the Thule® Yepp Maxi Child Seat

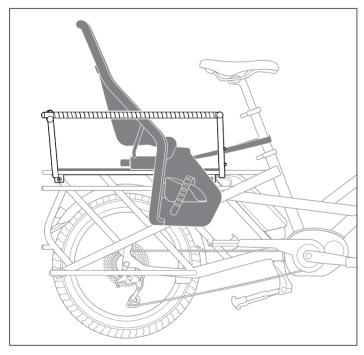




- 1. Remove the MadPad Seatpad and mount the Thule Yepp Maxi child seat in the front mounting window.
- 2. Attach and tighten child seat safety strap to Seatpost.

Carrying Cargo

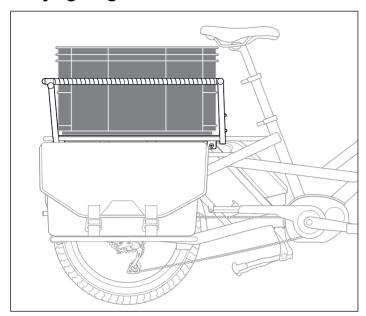

Remove the MadPad Seatpad set and insert Eurocrates. The Clubhouse fits a single 600 x 400 mm or two 400 x 300 mm Eurocrates that are at least 220 mm in height.

Installing a Bottle Cage or Lock

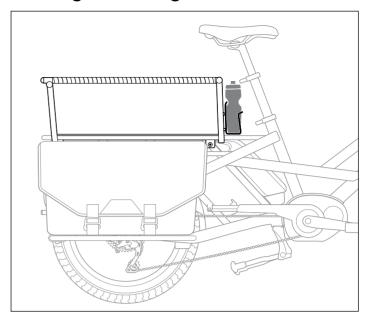

- 1. Use a 4 mm Allen Wrench to remove Bottle Cage bolts from Clubhouse frame.
- 2. Position Cage or Lock against the braze-ons.
- 3. Tighten Bolts to a torque of 4 Nm 5 Nm.

LIMITED PRODUCT WARRANTY INFORMATION: This Product comes with an ONE (1) YEAR Limited Warranty from the date of retail purchase by the original end-user. If a material or workmanship defect arises and a valid claim is received within the Warranty Period, this Product will be replaced. Mobility Holdings cannot be held liable for damages to personal property due to misuse or improper care and maintenance. This Product Warranty does not, under any circumstance, cover the replacement or cost of any third party product used with or connected to the Product.

Tern, the Tern Werd (logotype), the Tern Berd (device), GSD, Clubhouse, Cargo Hold Panniers, Sidekick Foot Pegs, Sidekick Lower Deck, MadPad used alone or in combination are trade names, trade devices or registered trademarks of Mobility Holdings, Ltd.

Trademarks are property of their respective owners.

© 2018 Mobility Holdings, Ltd.







ternbicycles.com